


v1.0

BROSA

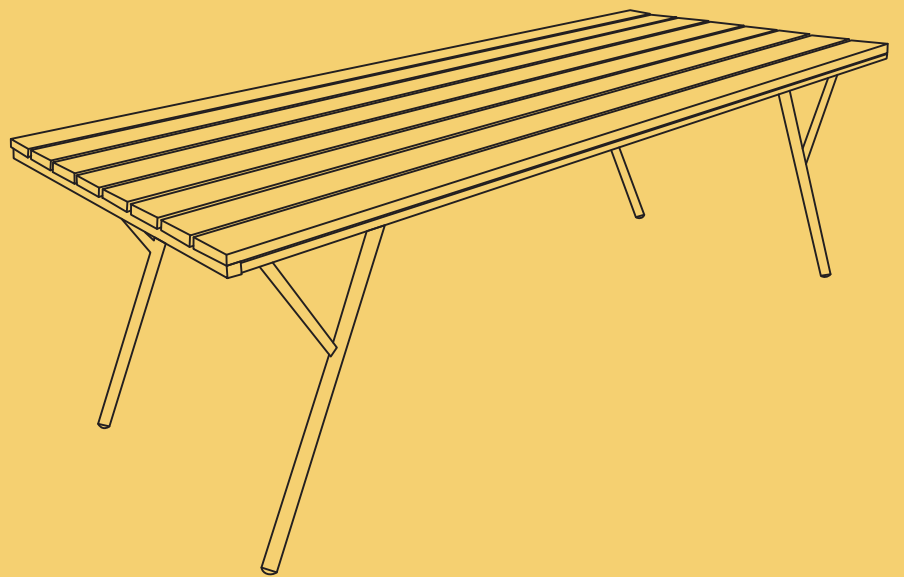

ASSEMBLY GUIDE

Litchfield Outdoor Dining Table

Components

Upon unpacking your table from its delivery box, you should have the separate pieces shown below. Follow the steps on the next pages to assemble your new table.


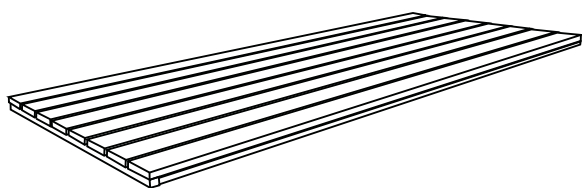


Table top x 1



A x 4 (Leg)

Hardware

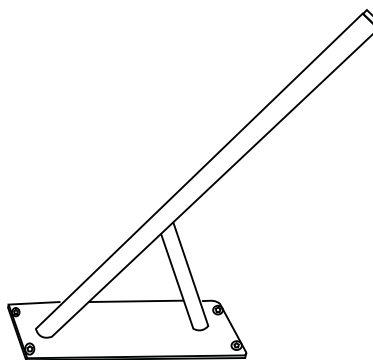

A x 16 (Bolt)



B x 16 (Spring Washer)




C x 16 (Washer)





D x 1 (Allen key)

What you need

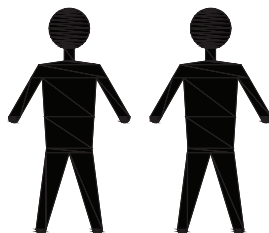

Step 1

Place the table top on a level surface with underside facing up. Place a leg onto the corner of the table top, making sure the bolt holes are aligned. Fit a spring washer (B) then a washer (C) to a bolt (A) and screw into a hole using allen key (D). Repeat for the other holes and for remaining legs.

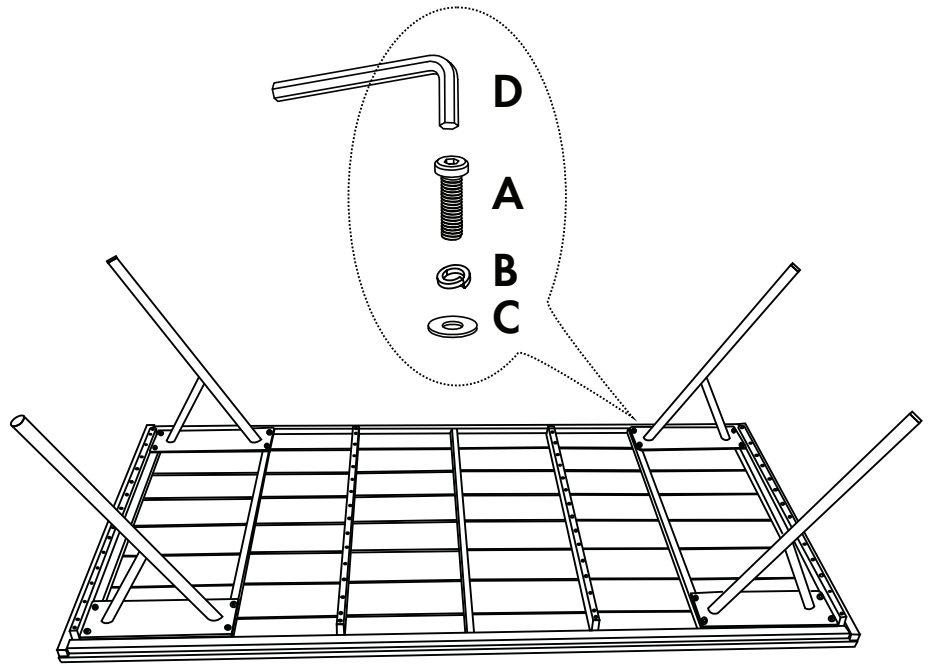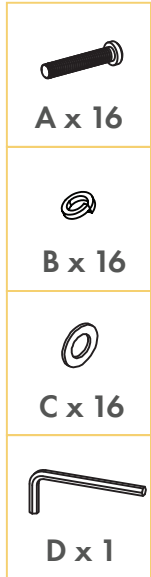

Step 2

Gently lift the table and place upright on a level surface. Enjoy your new table!

