


v1.0

BROSA

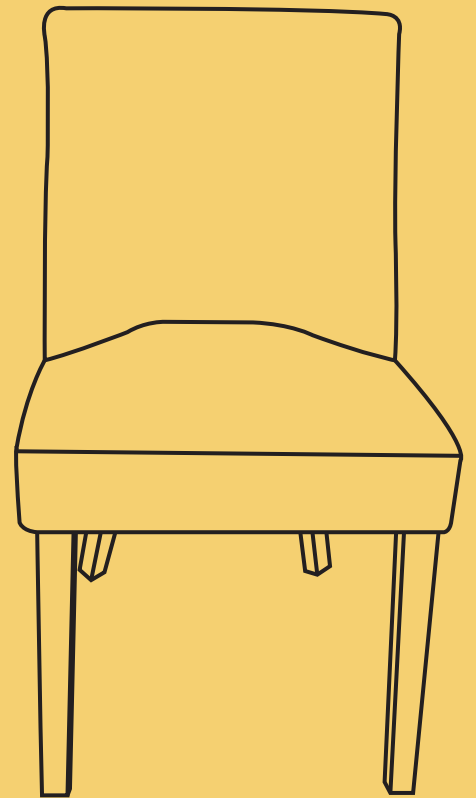


ASSEMBLY GUIDE

Lola Scoop Back Dining Chair

Components


Upon unpacking your chair from its delivery box, you should have one single component (the body of the chair). Additional components are packed inside the seat, you will learn how to access and utilise these components in the next steps.

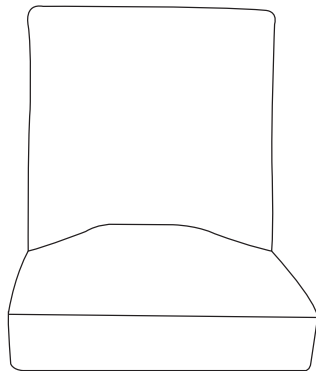

Chair body x 1





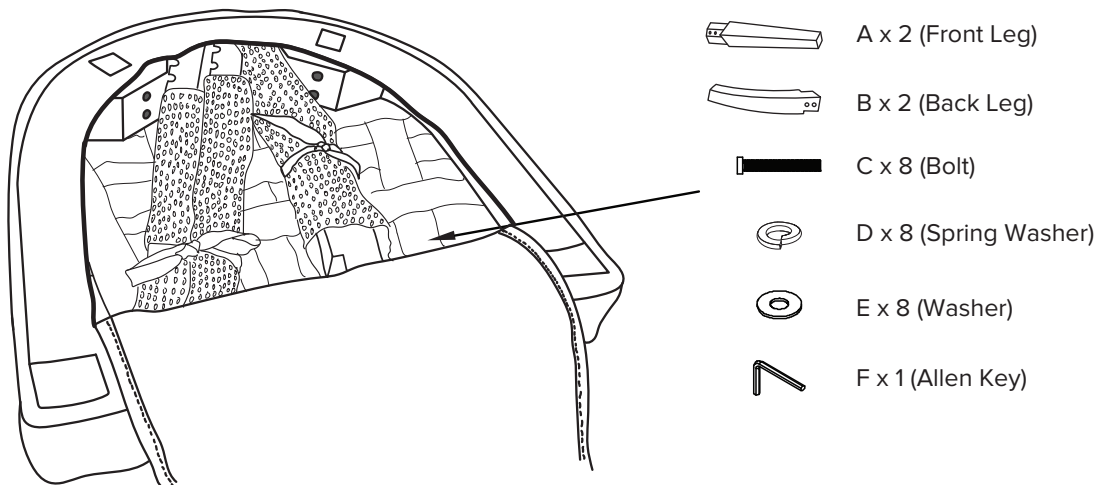

Unpacking


Turn the chair seat over so that the underside is facing you. Remove the fabric cover, which is attached by velcro, to reveal the chair legs and a bag of hardware.



Step 1




Starting with the front legs, insert a leg (A) into the corresponding slot. Fit a spring washer (D) to a bolt (C) followed by a washer (E) and fit it into one of the screw holes. Repeat for the second screw to fit the leg into the frame of the chair. Turn the bolt with the allen key (F) until it is secure but do not tighten yet. Repeat for all four legs. Please note that the back legs (B) are both the same and are to only go at the back of the chair.

| | |
|--|--|
|  A x 2 |  D x 8 |
|  B x 2 |  E x 8 |
|  C x 8 |  F x 1 |

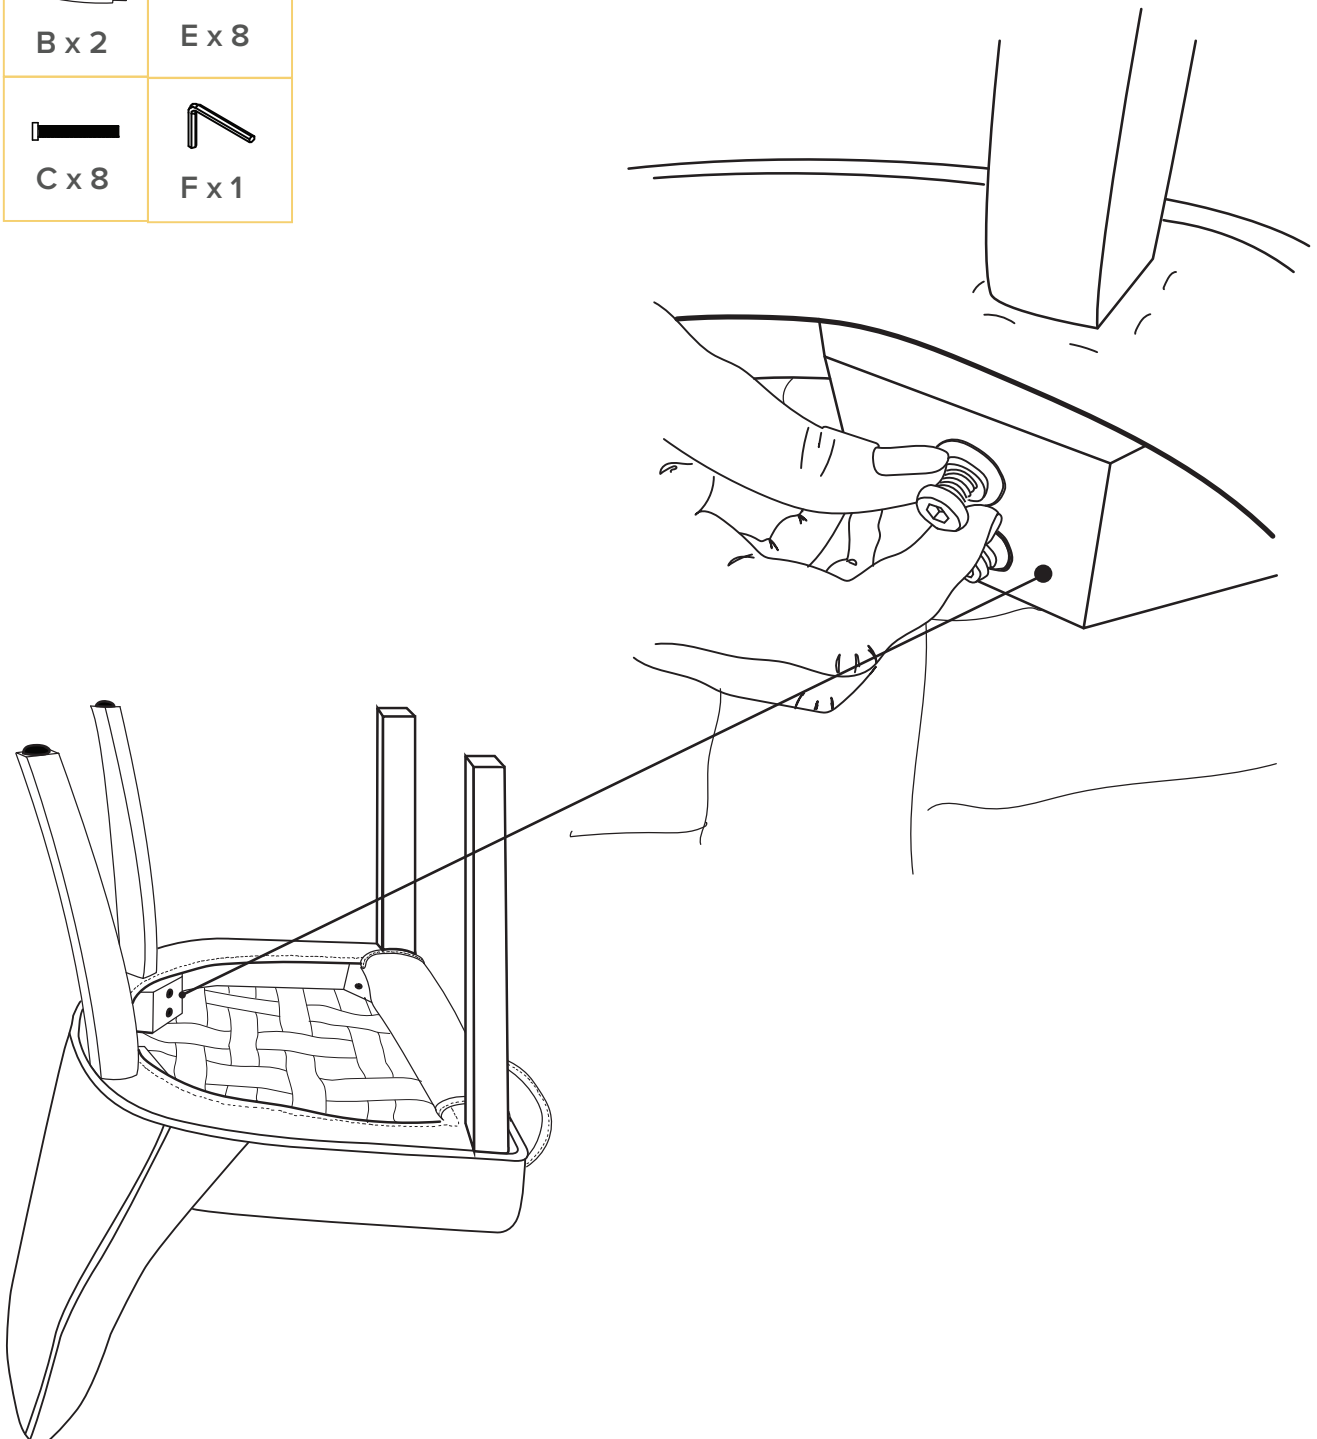

Step 2

Flip the chair the right way up and place it on a flat surface, then sit on the chair and shift your weight around until the legs are level and the chair does not rock. Then use the allen key (E) to tighten all the bolts. Replace the cover on the underside of the seat using the velcro tabs to conceal the exposed area.

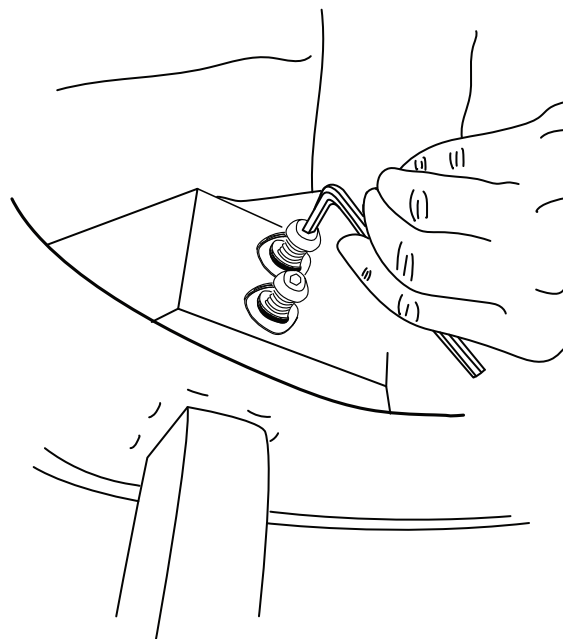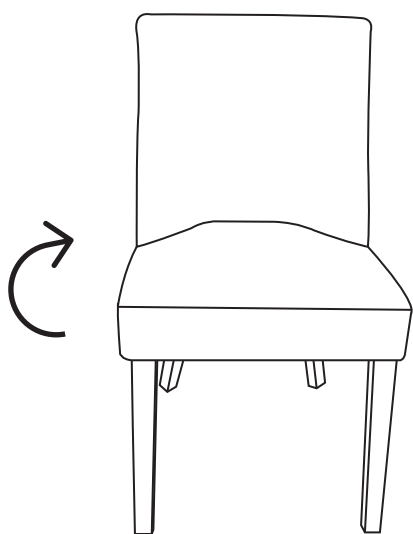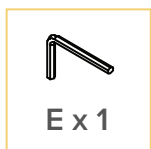

Step 3

Enjoy your new dining chair!

