


v1.0

BROSA

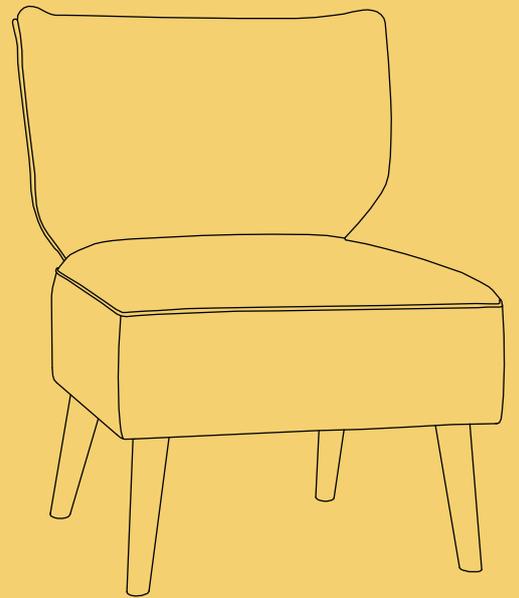


ASSEMBLY GUIDE

Hemingford Accent Chair

Components


Upon unpacking your chair from its delivery box, you should have two separate components (the seat and the back rest of the chair). Additional components are packed inside the seat, you will learn how to access and utilise these components in the next steps.

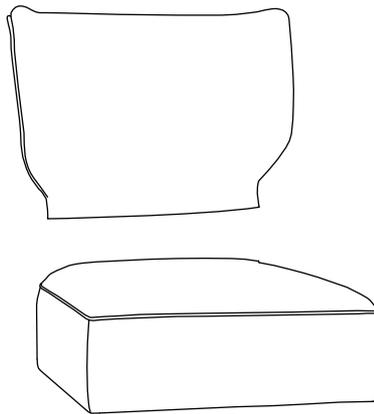

Chair seat x 1
Chair back rest x 1

Unpacking


Turn the chair seat so that the underside is facing you. Follow the coloured string to the component compartment. Unzip this and take out the additional components, then zip it back up.

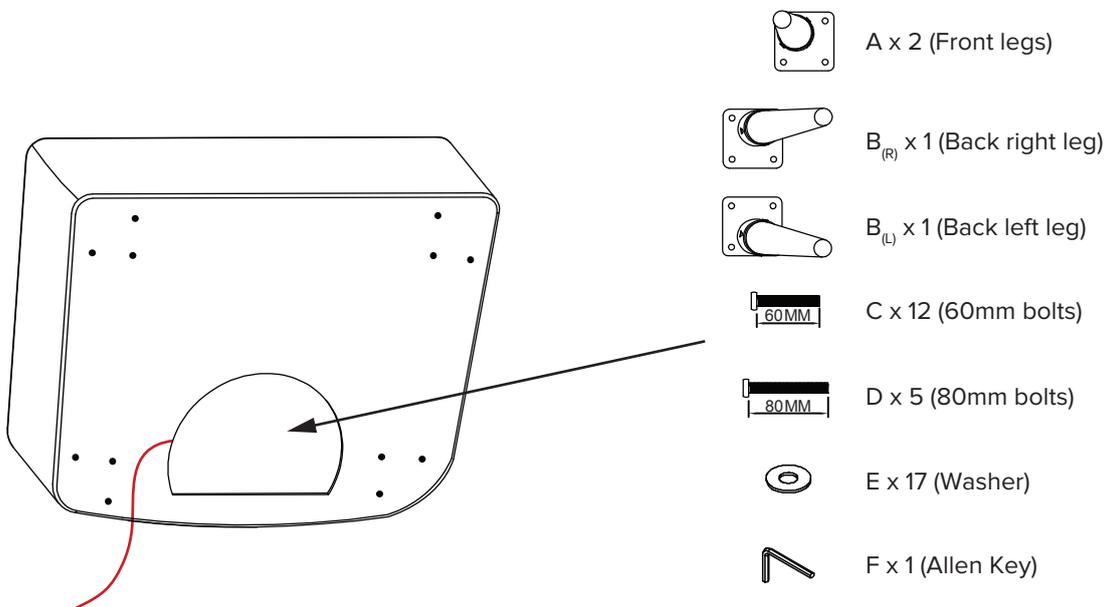

Step 1



Align the seat (1) to the back rest (2) so that the screw slots overlap. Fit a washer (E) to a 80mm bolt (D) and place it into one of the screw holes. Turn the bolt with the allen key (F) until it is secure. Repeat for all five bolts.


	D x 5
	E x 5
	F x 1

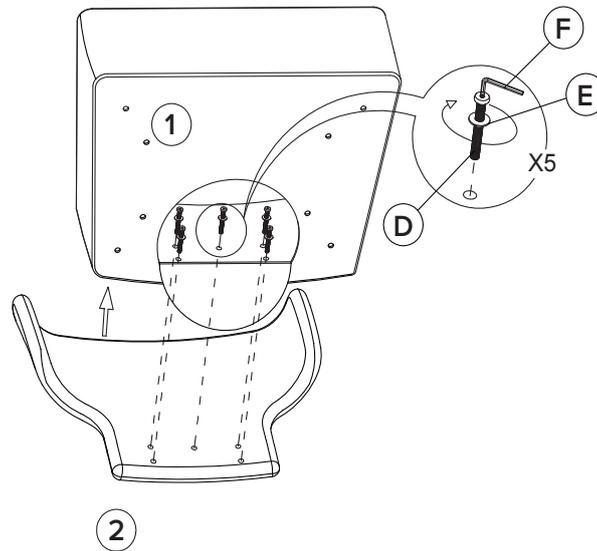

Step 2


Lay down the chair so that the underside of the seat is facing you. Align one front leg (A) over the screw slots so that they overlap. Fit a washer (E) to a 60mm bolt (C) and place it into one screw hole. Turn the bolt with the allen key (F) until it is secure, but do not tighten yet. Repeat for the other two bolts for that leg. Repeat those steps again for the second front leg (A) as well as for the left and right back legs (B_(L) & B_(R)) in their correct positions on the chair.

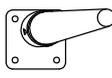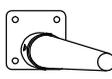	
A x 2	C x 12
	
B _(L) x 1	E x 12
	
B _(R) x 1	F x 1

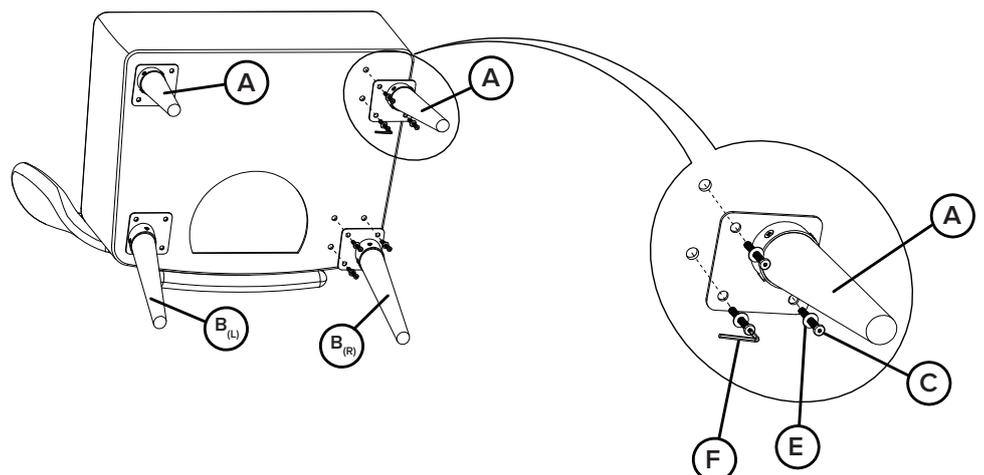

Step 3

Lift the chair off the ground and turn it right side up while being careful not to put any pressure on the legs while you turn the chair.

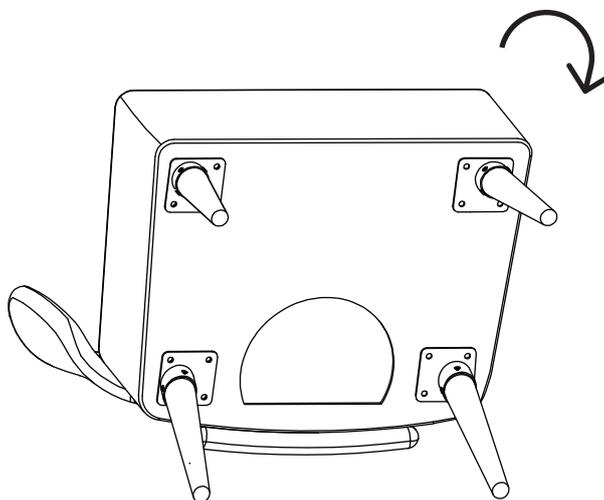

Step 4

Place the chair on a flat surface, then sit on the chair and shift your weight around until the legs are level and the chair does not rock. Then use the allen key (F) to tighten all the bolts. Enjoy your new chair!

